



#### Wiring diagram -0 Power Supply 110V-230VAC 12-36VDC Black Red Great Blue Broat DMX512 Master 000 8.5-1.5mm 19 Power Black Input Red DMX Cheen Output Black CE RoHS Line Color Black :V+ Rod :red light Groon :preen light Blas :blas light Brown :white light Power Ellack Input ERed DMX Green Input Blue Brown 000 ð I l Öl Ô Power Black Input Red DMX Steen Output Blas CE RoHS Line -Black Red Green Blue Brown Power Ellack Input Ellack DMX Bas Input Bas 000 Li-1.bear ê rî t Öı Power Black Input Red DMX Oreen Output Blas CE RoHS

## Feature


- Standard DMX512 compliant control interface, enable to set the DMX address freely. And show address Via digital numueric display.
- Three-channel/ four-channel output selectable.
- Two types available(Constant Voltage, Constant Current), suitable for different LED lamps.
- To work with power repeater to expand output power unlimitedly.
- IP67, Do Not touch with sharp stuff

DMX Certified Cable is required for use between Decoders/Receivers and Controllers. The cable must be rated for electronic transmission. Standard solid/stranded building wire (THHN & others) will not work to transmit the DMX signal.

### Parameter

Input Voltage	Output Current	Output Power	Remarks
12-36VDC	4x5A	4x(60-180)W	constant voltage


# **Product Size**

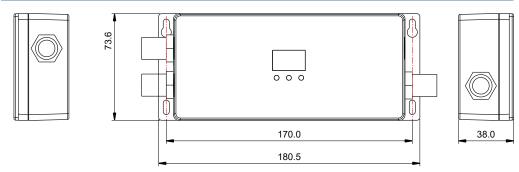

# Using instruction

### Operation

Through buttons to set desired DMX512 address, 1 key is to set "hundreds" position, 2 is to set "ten" position, 3 is to set "a" bit.

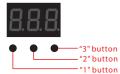

To open the connection of DMX512 controller, then it can work correctly.

8.8.8	8.8.8

#### Choose Channel

Press 2nd button and 3rd button at the same time for 2 seconds, cH digital display flashes, then press 1st button to choose 1/2/3/4, 3 means total 3 channels, 4 means total 4 channels. Press any button for >2 seconds to confirm the 1,2,3 or 4 channels. The factory preset default is 4 channels outputs.

#### Set DMX address

Press 1st button for 2 seconds, digital display flashes to set the required DMX address, then press any button for >2 seconds to confirm.



#### Choose PWM frequency

Press 1st button and 3rd button for 2 seconds, digital display flashes to show P-c. P means PWM frequency, press 1st to show "1", means 1500Hz, "2" means 200Hz. c means dimming options, press 3rd to show "1", means logarithmic dimming, "2" means linear dimming.

The factory preset default is PWM frequency 200Hz with linear dimming. 2-2